

Buggy

WARNINGS

Only suitable for dolls. Do not allow children to sit or ride in this toy.

Check regularly for wear and tear. Discontinue use if breakage is found. Failure to do this may result in injury.

THIS PRODUCT IS NOT SUITABLE FOR CHILDREN UNDER THREE YEARS OF AGE DUE TO SMALL PARTS AND LONG STRAPS.

WASHING INSTRUCTIONS

Wipe with a damp cloth.
Use mild detergent if necessary.
Do not machine wash this fabric.

Please retain this leaflet for reference to the manufacturer.

Product No. M05507-01

Made in China
to European Safety Standards

DISTRIBUTED BY



MV SPORTS & LEISURE LTD
35 Tameside Drive • Castle Bromwich
Birmingham • B35 7AG • UK
Email: info@mvsports.com
www.mvsports.com




CUSTOMER HELPLINE

We make every effort to ensure that this product reaches you in satisfactory condition.

However if you have any queries, need assistance, or find this product defective, please call our Customer Helpline:


0870 8404255 (UK ONLY)

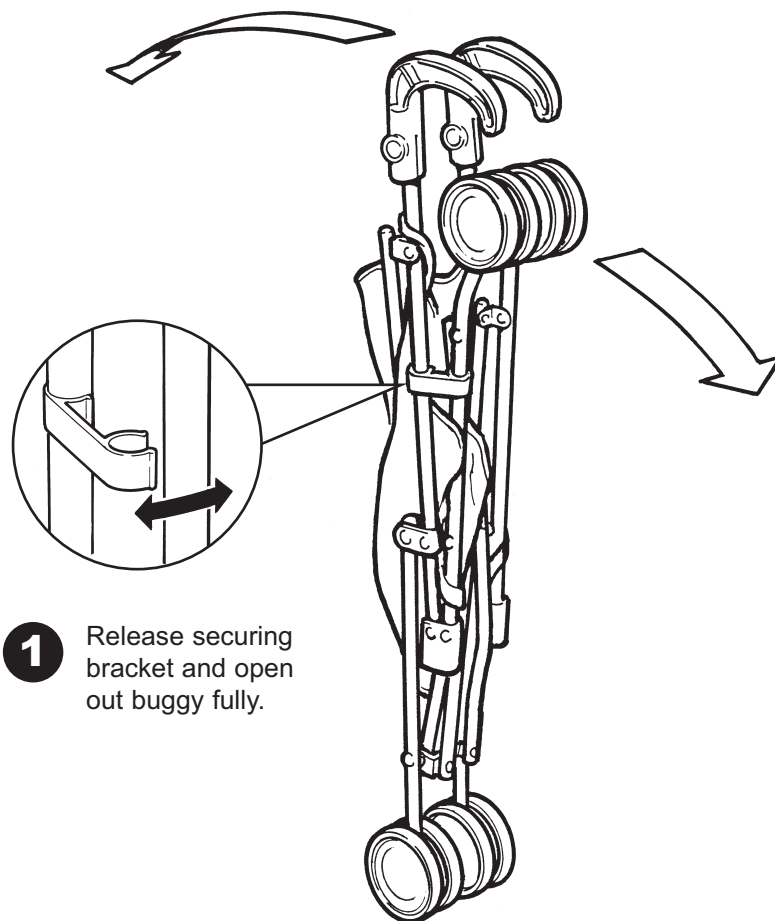

1 Release securing bracket and open out buggy fully.



2 To lock frame in position, push down and engage frame locks.

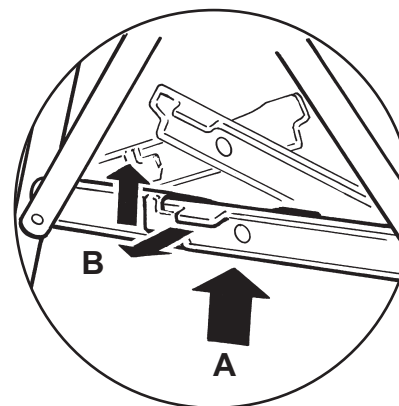

3 To fold the buggy:
A - push frame lock up.
B - pull tab and lift.
Push frame together to close.