

# Bouncer

## WARNINGS

Only suitable for dolls. Do not allow children to sit in this toy.

Check regularly for wear and tear. Discontinue use if breakage is found. Failure to do this may result in injury

## WASHING INSTRUCTIONS

Wipe with a damp cloth.  
Use mild detergent if necessary.  
Do not machine wash this fabric.

*Please retain this leaflet for reference to the manufacturer.*

**Product No. M05510**

Made in China to European Safety Standards

DISTRIBUTED BY



**MV SPORTS & LEISURE LTD**  
35 Tameside Drive • Castle Bromwich  
Birmingham • B35 7AG • UK  
Email: [info@mvsports.com](mailto:info@mvsports.com)  
[www.mvsports.com](http://www.mvsports.com)





## OPENING OUT THE BOUNCER

Hold frame base and seat and open out until it clicks into position.

## CLOSING THE BOUNCER

Hold the base and seat and push together.

**CAUTION:** When closing, do not hold frame near hinges to avoid trapping

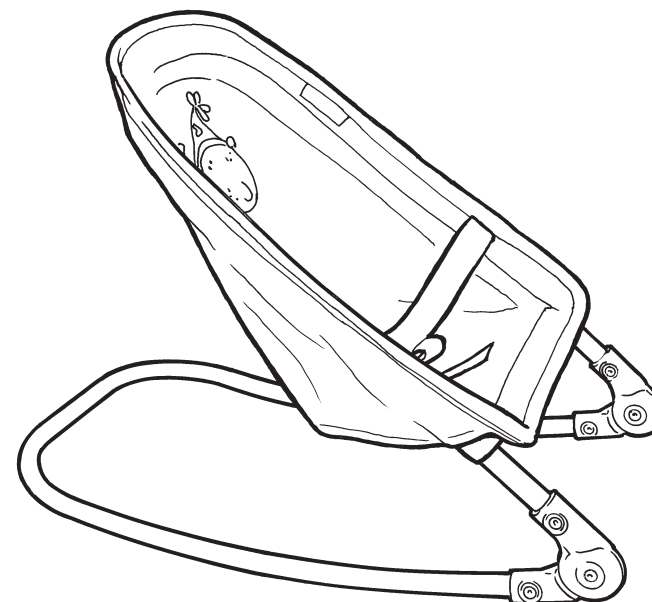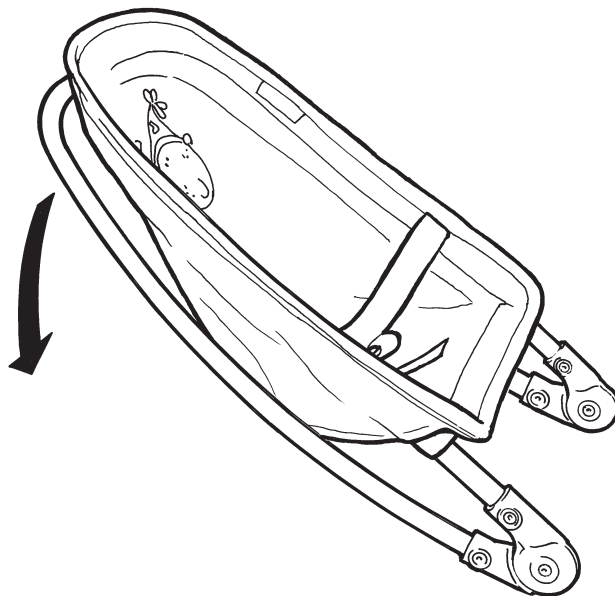

## CUSTOMER HELPLINE

We make every effort to ensure that this product reaches you in satisfactory condition.

However if you have any queries, need assistance, or find this product defective, please call our Customer Helpline:

**0870 8404255** (UK ONLY)