

# Light Fantastic


## REPLACING THE BATTERIES

- 1 Unscrew and remove the back.
- 2 Take the PCB out of the unit. (the batteries are mounted on the PCB).
- 3 Using a pen, push the battery out from the PCB.
- 4 Insert the new batteries ensuring the polarity is correct.
- 5 Put the PCB back into the unit.
- 6 Replace the back and secure with the screws. Do not overtighten the screws.

## BATTERY CARE INFORMATION

- The batteries must be installed / replaced by an adult only.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the unit.
- The supply terminals are not to be short-circuited.
- Do not attempt to recharge non-rechargeable batteries.

Pull the  
battery  
insulation  
tab out  
before use.

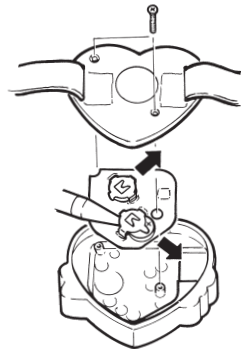

**Not suitable for children under 36 months due to small parts.**

Please retain this leaflet for reference to the manufacturer.

Carefully made in China to European Safety Standards.



This mark denotes compliance with the standards laid down by the EC (European Community).



DISTRIBUTED BY  
**MV SPORTS & LEISURE LTD**  
35 Tameside Drive  
Castle Bromwich  
Birmingham • B35 7AG • UK  
Email: [info@mvsports.co.uk](mailto:info@mvsports.co.uk)

