

# SPECTRA MISSION BELT

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PART

Product No. M09872




## BATTERY WARNINGS:

- non-rechargeable batteries are not to be recharged;
- rechargeable batteries are to be removed from the toy before being charged;
- rechargeable batteries are only to be charged under adult supervision;
- different types of batteries or new and used batteries are not to be mixed;
- only batteries of the same or equivalent type as recommended are to be used;
- batteries are to be inserted with the correct polarity;
- exhausted batteries are to be removed from the toy;
- the supply terminals are not to be short-circuited.

## Secret Message Writer


Write secret messages with the invisible Ink Marker.

Invisible Ink Marker

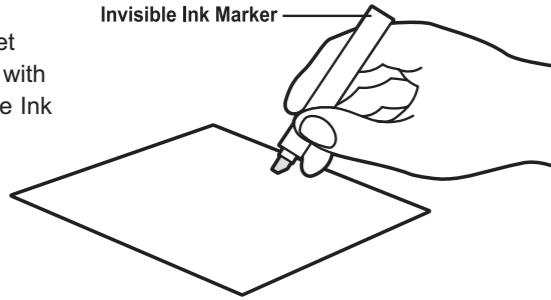


Use the ultra-violet blacklight to read secret messages. Press on the ON/OFF switch to turn it on.

Ultra-violet Blacklight

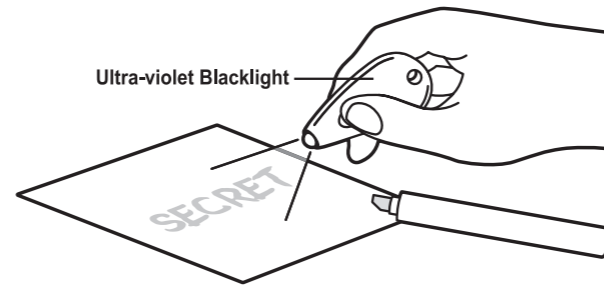


## REPLACING BATTERIES

To replace the batteries, use a small cross head screw driver to open the battery cover. Replace the batteries with the same or equivalent type (LR41, 1.5V) button cells. Replace the battery cover and fasten using screw before use. Do not overtighten the screw.

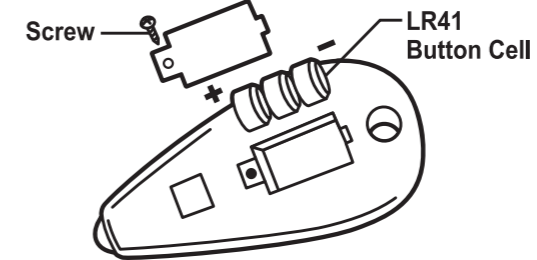


## Folding Telescope

To use the folding telescope, flip up the lens as illustrated. Adjust the focus by rotating the focus knob.

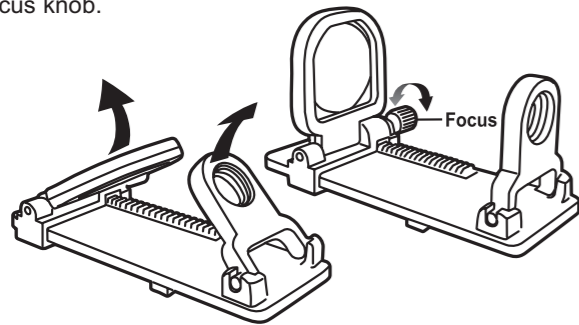


Flip-up the front lens and it can be used as a magnifier.

Magnifier

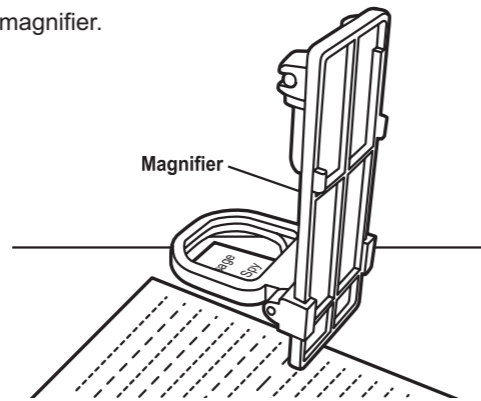


## Mini Listening Device

Your mini listening device is very easy to use. Push up on the ON/OFF switch to turn it on. Push down to turn off. Remember to turn it off when not in use.

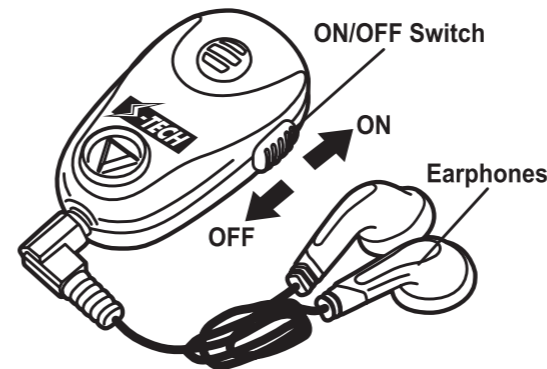

## REPLACING BATTERY


Remove the screw on the battery cover using a small screw driver. Replace the "LR44" button cell battery with the same or equivalent battery. Replace the battery cover and fasten using screw before use. Do not overtighten the screw.

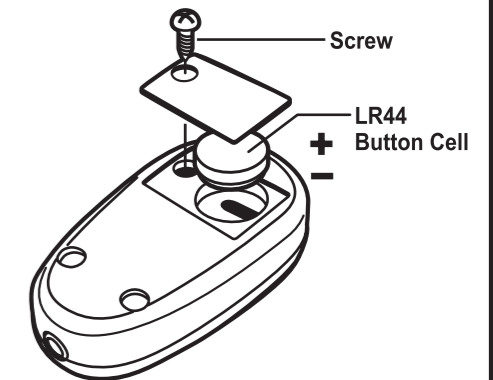


## Motion Alarm

### INSTALLING BATTERIES (Motion and Intrusion alarm)

Each alarm requires 2 x 1.5V "AAA" batteries (NOT INCLUDED). Undo the locking screws on the battery cover and remove the cover. Insert the batteries as illustrated. Replace the battery cover and fasten using screw before use. Do not overtighten the screw.

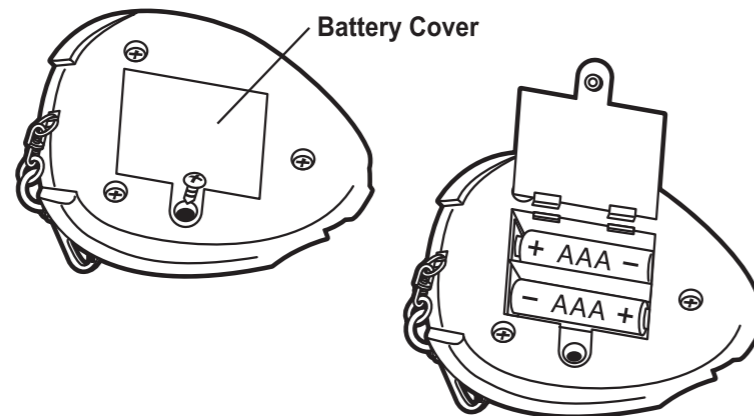


To protect and secure any object simply place or clip the motion alarm onto the object. The alarm is suitable for books, bags, backpacks, bikes, etc. For objects with uneven surfaces make sure you attach the alarm securely using the spring loaded clips. Switch on the alarm, the LED light blinks whenever the alarm is on. Any movement of the alarm will set it off for a few seconds, after which the alarm resets itself. Turn off the alarm when not in use.

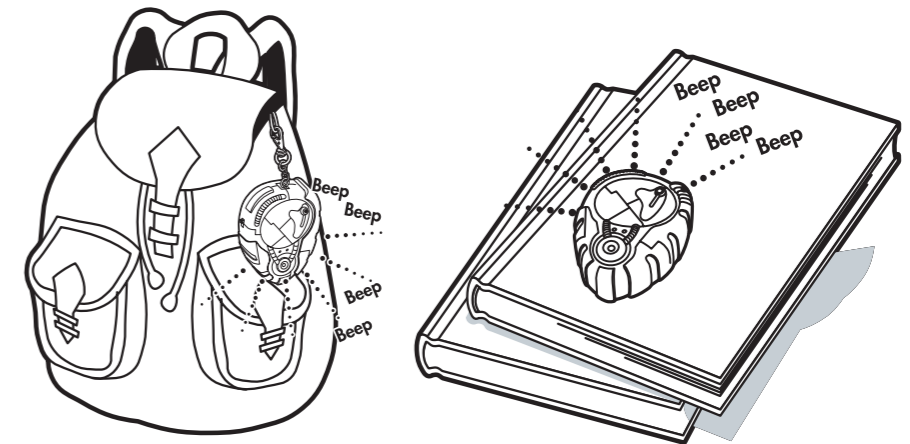

## Intrusion Alarm

### INSTALLING BATTERY SEE MOTION ALARM


To detect movement place the alarm on a flat surface near a doorway or entrance. Switch on the alarm, the LED light blinks whenever the alarm is on. Any movement near the alarm will set it off for a few seconds, after which the alarm resets itself. Turn off the alarm when not in use.

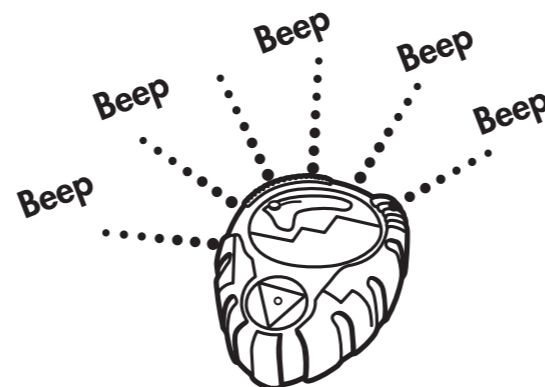

## Torch

### REPLACING BATTERY

Undo the locking screw on the battery cap and turn the cap counter-clockwise to remove it. Insert 2 "AA" batteries (NOT SUPPLIED) into the Torch as illustrated. Replace the cap and locking screw. Do not overtighten the cap.

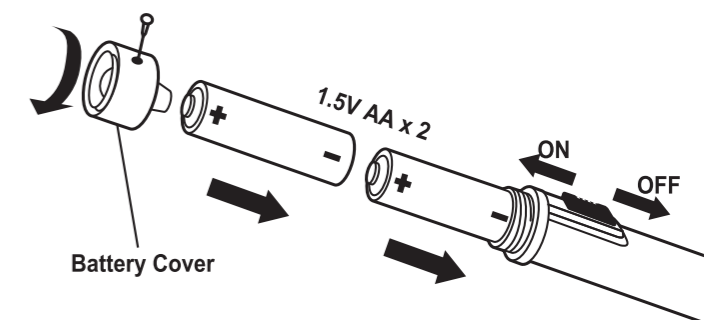

DISTRIBUTED BY  
MV SPORTS & LEISURE LTD  
35 Tameside Drive • Castle Bromwich  
Birmingham B35 7AG • UK  
Email: info@mvsports.com • www.mvsports.com

Please retain this leaflet for reference to the manufacturer.

Made in China to European Safety Standards.



The CE mark denotes compliance with the standards laid down by the EC (European Community).

### CUSTOMER HELPLINE (UK ONLY) 0870 8404255

We make every effort to ensure that this product reaches you in satisfactory condition.

However if you have any queries, need assistance, or find this product defective, please call our Customer Helpline.